


Trailer Wiring

Socket and plug wiring instruction

12N Normal Socket 12S Supplementary Socket

- | | |
|---------------------|------------------------------|
| 1) Left indicator | 1) Reverse |
| 2) Fog | 2) Battery Charge ** |
| 3) Earth | 3) Earth |
| 4) Right indicator | 4) Power feed |
| 5) Right side light | 5) Spare |
| 6) Brake | 6) Fridge ** |
| 7) Left side light | 7) Earth for pin 6 (1998 on) |

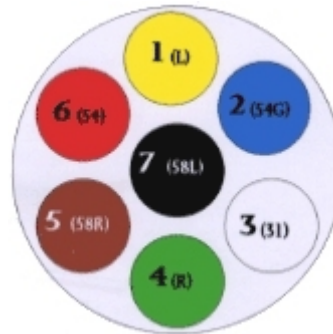


**NB It is essential that pin 6 is wired through a split relay from 1998 on!!

Relay wiring diagrams

NB Colours may vary between manufacturers. Instructions as listed are a guideline only and no responsibility will be accepted for incorrect interpretation.

Audible relay wiring instructions

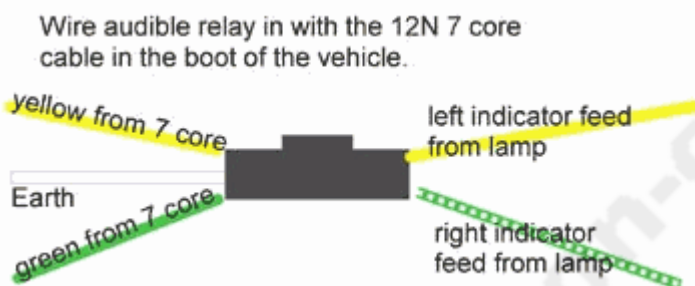


Self switching tandem split charge relay wiring instruction


44str green cable to car battery via heavy duty fuse holder and 25amp fuse



Single bulb failure bypass relay wiring instruction

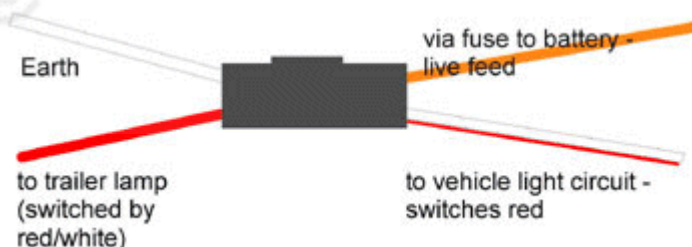


Twin bulb failure bypass relay wiring instruction

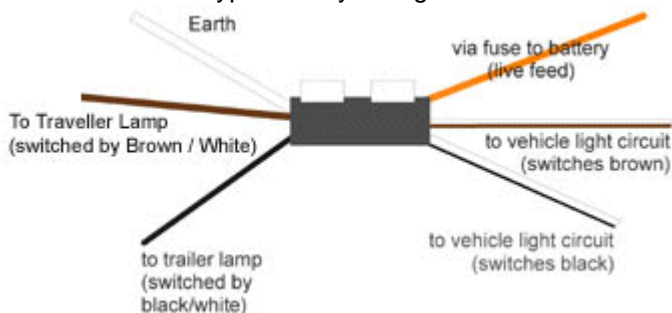

Triple bulb failure bypass relay wiring instruction


This wiring diagram is to be used in conjunction with our normal 12N wiring kit instructions.

Live feed from battery via 15 amp fuse

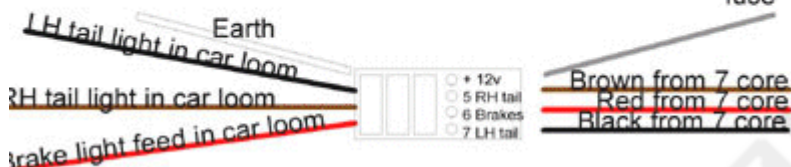


Four way bulb failure bypass relay wiring diagram

Live feed from battery via 15 amp fuse

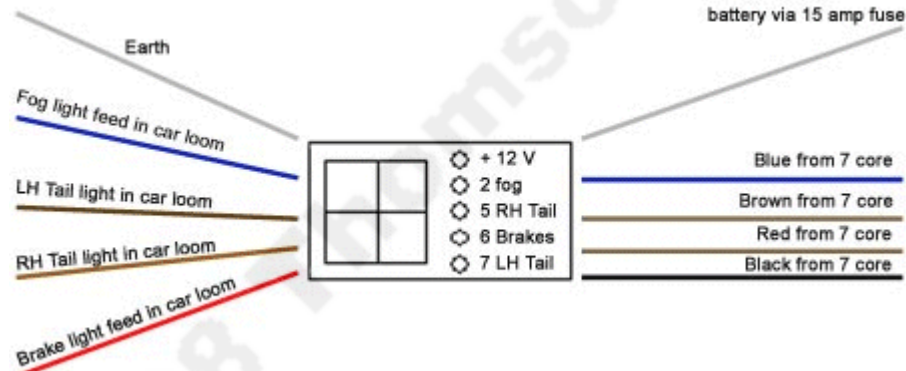


Six way bulb failure bypass relay wiring diagram

© 2008

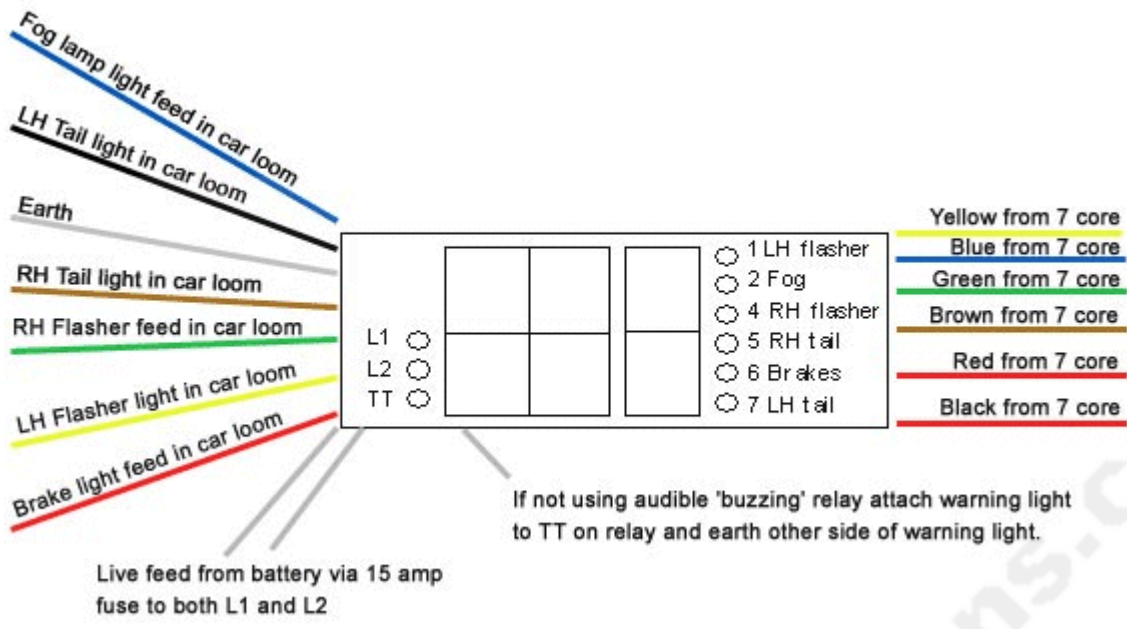

Universal warning light relay instruction

Wire relay in with the 12N 7 core cable in the boot of the vehicle. Wiring through the vehicle where the light is to be mounted.

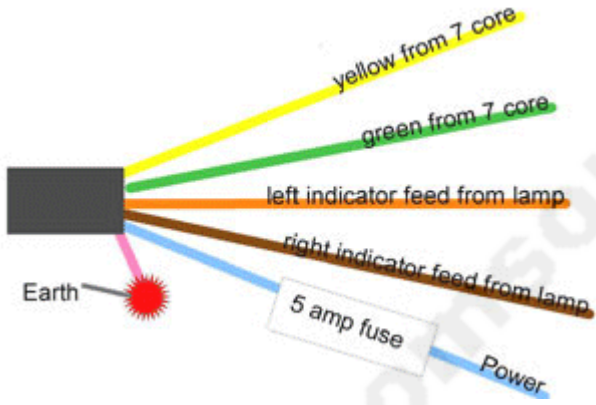

©2008 Thompson-Caravans.co.uk